




# Quick Start Reference Guide\*

## Parts & Assembly



## Accessories

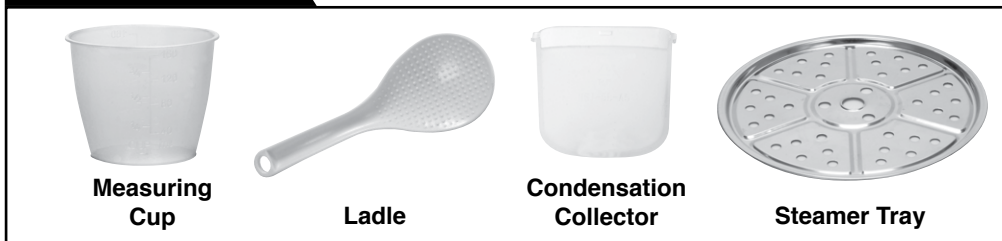

**IMPORTANT:** Your Power Pressure Cooker XL™ has been shipped with the components shown above. Check everything carefully before use. If any part is missing or damaged do not use this product and contact shipper using the customer service number located in the back of the Owner's Manual.

\*This Guide is not a substitute for the Owner's Manual. Refer to this guide only after you have read the Owner's Manual thoroughly.

## Step 1

Before using the Power Pressure Cooker XL for the first time, wash the Inner Pot, the Lid and the Rubber Gasket with warm soapy water. Rinse with clean water and dry thoroughly. To ensure correct fitting of the Rubber Gasket, fill the Inner Pot with water about 2/3 full, place the Lid on the cooker with Handle and Recessed Valve (Fig. A) pointed to the "10:00 o'clock" position. Rotate Lid counter-clockwise until you feel a click, then Rotate the Pressure Valve to the Lock position and run on CANNING mode for 10 minutes.



## Step 2

When the cycle is complete, using tongs or another kitchen tool, carefully rotate the Pressure Valve to the Open position (Pictured to the right Fig. B) allowing all pressure to escape. Let the appliance cool to room temperature. Pour out the water. Rinse and towel dry the Inner Pot. The Power Pressure Cooker XL is now ready for use.




SYMBOLS (close up)

**WARNING:** Avoid serious injury... Never use your hand to set the Pressure Valve in the Open Position after any cooking process. Use tongs or some other kitchen tool.

## Step 3

Place Inner Pot into the unit and add ingredients for your recipe. Never load Inner Pot above the MAX line. Rotate the Inner Pot to make certain that it is seated properly.

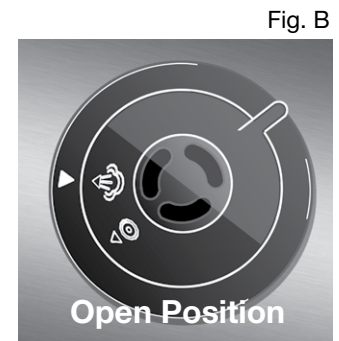

Place Lid on Cooker with Handle and Recessed Valve (Fig. A) pointed to the "10:00 o'clock" position. Rotate Lid counter-clockwise until you feel a click. Rotate Pressure Valve to the Lock position. Follow your recipe for cook time.



**HOT LID WARNING:** Use black composite handle only when opening lid. The stainless steel parts become very hot and could burn your hands.

## Condensation Collector

The Condensation Collector easily picks up any moisture that may drip off when using your Power Pressure Cooker XL. Simply align and push the collector into the channels on the back of the cooker. Empty and clean after each use.

